



Handy Art Fabric Paint Directions

Apply with stiff bristle brush, block print method or silk screen. Natural fibers such as cotton or linen work best, but fabric paint will remain permanent on many synthetics. Water may be used to thin colors. Mix with base to obtain transparent shades. Add three tablespoons of binder per pint of color, addition of binder will improve washability but might stiffen fabric. Add 15% binder if fabric contains wool or silk (fabric paint is not recommended for these fabrics). Wash out all sizing before printing. Heat set with iron at 275 degrees for five minutes or 350 degrees for three minutes. Iron one square foot at one time. May be oven heat set at above temperatures if enclosed in covered pan to avoid scorching.